

**Power**  
Turns components On/Off

**TV**  
Controls TV functions

**STB**  
Used for Set Top Box functions

**Rewind/Play/Pause/ Fast Forward/Stop**  
For use with PVR/VCR/DVD/VOD Functions

**Menu**  
Displays main menu

**Info**  
Displays information about current program

**OK**  
Press when you want to select a program or highlighted object

**Arrows**  
Allows you to scroll through the guide and menu

**Guide**  
Displays programming guide

**Exit**  
Exits the guide and menu

**Page Back/Forward**  
Scrolls Side to Side from the current page in the guide

**Page Up/Down**  
Scrolls Up and Down from the current page in the guide

**Red/Green/Yellow/ Blue Buttons**  
Only used for menu functions

**Volume +/-**  
Increases/Decreases volume

**Channel +/-**  
Changes channels on the STB

**Last**  
Returns your programming back to the previous channel

**Number Keys**  
Used for typing in channels numbers and alphabet letters

**Delete**  
Deletes single character in text entry boxes

**Closed Captioning**  
Enable/Disables Closed Captioning

**Input**  
Switches between audio video inputs on your TV

Turning ON and OFF Television  
To turn on TV press TV then **POWER**  
Press STB to control our set top box  
To turn off TV press TV then **POWER**

